

## Tire Tread Condition

To check the condition of a tire tread, measure the groove depth (1) in the center of the tire, or check the wear indicator (2) as shown in Fig. 4-35. The minimum tread depth is 0.16 in (4 mm). When the tread depth is less than recommended, the tire should be replaced.

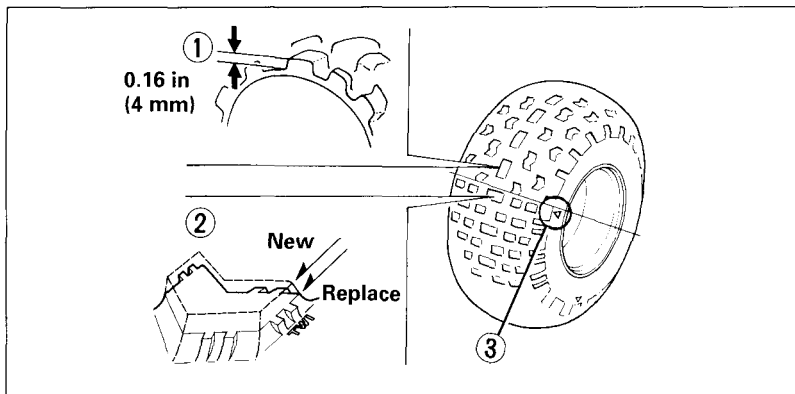


Fig. 4-35

(1) Groove depth

(2) Wear indicator

(3) Wear indicator location mark