

MAINTENANCE AND REPAIRS

MAINTENANCE SCHEDULE

| ITEMS | FREQUENCY | Whichever comes first ↷ | INITIAL | REGULAR | | Refer to page |
|-----------------------------------|-----------|----------------------------|-------------|----------------------|------|---------------|
| | | | MAINTENANCE | MAINTENANCE INTERVAL | | |
| | | | mi | 600 | 1200 | |
| | | | km | 1000 | 2000 | |
| NOTE | HOURS | 20 | 100 | 200 | | |
| * FUEL LINE | | | | | I | — |
| * FUEL STRAINER SCREEN | | | | | C | 94,95 |
| * THROTTLE OPERATION | | | | | I | 96 |
| * CARBURETOR CHOKE | | | | | I | 101 |
| AIR CLEANER | (NOTE 1) | | | C | C | 97–99 |
| AIR CLEANER HOUSING DRAIN TUBE | (NOTE 2) | | | I | I | 100 |
| SPARK PLUG | | | | I | I | 114 |
| * VALVE CLEARANCE | | | I | I | I | 115 |
| ENGINE OIL | | | R | R | R | 104–105 |
| ENGINE OIL FILTER | | | R | R | R | 106–108 |
| * ENGINE IDLE SPEED | | | I | I | I | 101 |

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate