

L

Loading

Loading guidelines and procedures	44
Weight limits	43

Lubrication

(see Engine oil, Gear case oil and differential oil)

M

Maintenance

Precautions	86
Schedule	85

Modifications	48
---------------------	----

N

Neutral indicator lamp	26
------------------------------	----

O

Obstacles, riding over	82
------------------------------	----

Oil (see Engine oil, Gear case oil and differential oil)

Oil filler cap/dipstick	32
-------------------------------	----

Oil filter, changing	106
----------------------------	-----

Owner's manual compartment	35
----------------------------------	----

P

Parking	84
---------------	----

Parts location	10
----------------------	----

Parking brake	29
---------------------	----

Passenger carrying	50
--------------------------	----

Pavement, no riding on	52
------------------------------	----

Pinging	92
---------------	----

Power supply, 12V DC	36
----------------------------	----

Pre-ride inspection	40
---------------------------	----

R

Reverse

Assist cable	117
--------------------	-----

Assist lever	117
--------------------	-----

Gear, shifting into	27, 65
---------------------------	--------

Indicator lamp	26
----------------------	----