

To adjust the brake lining clearance:

1. Squeeze the brake lever firmly two or three times then release it.
2. Raise the front wheels off the ground by placing a support block under the vehicle.
3. Beginning with either the left or right front wheel, remove the inspection hole plug (Fig. 4-22) and line up the hole with one of the brake adjusters (Fig. 4-23).
4. Using a screwdriver, turn up the brake shoe adjuster (1) until the front brake locks.

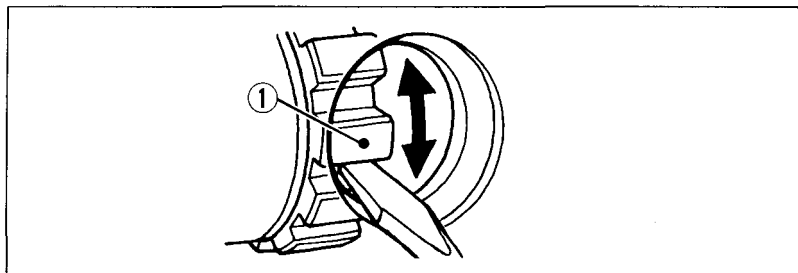


Fig. 4-23

(1) Brake adjuster