

To check the brake fluid level:

Brake fluid must be added to the reservoir (Fig. 4-24) whenever the fluid level approaches the lower level mark (7). Use only DOT 3 or 4 brake fluid.

NOTE:

If the fluid level approaches the lower level mark (7), the brake system should be inspected by your authorized Honda dealer. A low fluid level may indicate fluid leakage. Brake failure may occur if this condition exists and is not corrected.

CAUTION:

- * **To prevent damage to the brake system, use only fluid from a sealed container. Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.**
 - * **Brake fluid can damage paint and plastic, so handle the fluid with care. When adding brake fluid, be sure the reservoir is horizontal before removing the cover to prevent accidental spilling.**
1. Remove the screws (1), reservoir cap (2), diaphragm plate (3), diaphragm (4) and float (5).
 2. Fill the reservoir with the recommended brake fluid up to the upper level mark (6).
 3. Reinstall the parts in the reverse order of removal.

While reading this manual, remember:

▲ WARNING Indicates a strong possibility that serious injury or death may result if instructions are not followed.