

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ⇒ NOTE | INITIAL MAINT. | | REGULAR MAINT. INTERVAL | | Refer to page |
|-------|-----------------------------------|--|-------------------|-----|----------------------------|------|------------------|
| | | | km | 150 | 1000 | 2000 | |
| | | | mi | 100 | 600 | 1200 | |
| | | | HOURS | 20 | 100 | 200 | |
| * | FUEL LINE | | | | I | | — |
| * | THROTTLE OPERATION | | | | I | | 122 |
| * | CARBURETOR CHOKE | | | | I | | 124 |
| | AIR CLEANER | NOTE 1 | | | C | C | 117 |
| | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2 | | | I | I | 121 |
| | SPARK PLUG | | | | I | I | 128 |
| * | VALVE CLEARANCE | | | I | I | I | 131 |
| | ENGINE OIL | | | R | R | R | 107 |
| | ENGINE OIL FILTER | | | R | R | R | 110 |
| * | ENGINE IDLE SPEED | | | I | I | I | 127 |

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.