

	FREQUENCY ITEMS	Whichever comes first ↪	INITIAL		REGULAR		Refer to page	
			MAINTENANCE		MAINTENANCE INTERVAL			
			mi	100	600	1200		
			km	150	1000	2000		
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS				I	I	—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)	I	117—119	
	* BRAKE FLUID	(NOTE3)			I	I	134	
	* BRAKE SHOE WEAR	(NOTE1)				I	139	
	BRAKE SYSTEM			I	I	I	131—140	
	* REVERSE LOCK SYSTEM			I	I	I	123	
	SKID PLATES,ENGINE GUARD					I	I	147
	* CLUTCH SYSTEM			I	I	I	122	
	* SUSPENSION					I	I	—
	* SPARK ARRESTER					C	C	148
	* NUTS, BOLTS, FASTENERS			I		I		—
	** WHEELS/TIRES			I	I	I		141—145
** STEERING SHAFT HOLDER BEARINGS					I		—	
** STEERING SYSTEM					I		—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.