

# Spark Plug

---

7. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

Tighten the spark plug:

- about  $1/8 - 1/4$  turn after it seats (if the old plug is good).
- about  $1/2$  turn after it seats (if installing a new plug).

## NOTICE

*Improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.*

8. Connect the spark plug cap.