

## MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Which ever comes first ⇒	INITIAL		REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
				mi	100	600	1200	
				km	150	1000	2000	
NOTE	HOURS	20	100	200				
EMISSION RELATED ITEMS	*	FUEL LINE				I		—
	*	THROTTLE OPERATION				I		98
	*	CARBURETOR CHOKE				I		103
		AIR CLEANER	(NOTE 1)			C	C	99—101
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	102
		SPARK PLUG				I	I	114—115
	*	VALVE CLEARANCE			I	I	I	115
		ENGINE OIL			R	R	R	35, 106—110
		ENGINE OIL FILTER			R	R	R	108—110
	*	ENGINE IDLE SPEED			I	I	I	104

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean      R: Replace

A: Adjust     L: Lubricate