

	ITEMS	FREQUENCY	Which ever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				100	1000	2000		
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS				I	I	—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)	I	111–113	
	* BRAKE FLUID	(NOTE3)			I	I	128	
	* BRAKE SHOE WEAR	(NOTE1)				I	133	
	BRAKE SYSTEM			I	I	I	125–134	
	* REVERSE LOCK SYSTEM			I	I	I	117	
	SKID PLATES,ENGINE GUARD					I	141	
	* CLUTCH SYSTEM			I	I	I	116	
	* SUSPENSION					I	—	
	* SPARK ARRESTER					C	C	142
	* NUTS, BOLTS, FASTENERS				I		I	—
	** WHEELS/TIRES				I	I	I	135–139
	** STEERING SHAFT HOLDER BEARINGS						I	—
** STEERING SYSTEM						I	—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.