

An electric fan is used to automatically provide sufficient air flow through the oil cooler before the engine oil temperature becomes too high.

If the warning lamp goes on frequently while riding, or it does not light when the ignition switch is turned on, have your TRX inspected by your authorized Honda dealer.

CAUTION:


- * Do not carry or store articles on the front bumper as such practice may restrict air flow through the engine and oil cooler, resulting in engine overheating.

Reverse Indicator Lamp

This TRX is equipped with a reverse indicator lamp (1) to show when the transmission is in reverse. The reverse indicator lamp is on the handlebar cover and will light when the transmission is in reverse with the ignition switch ON.

Neutral Indicator Lamp

This TRX is equipped with a neutral indicator lamp (2) to show when the transmission is in neutral. The neutral indicator lamp is on the handlebar cover and will light when the transmission is in neutral with the ignition switch ON.

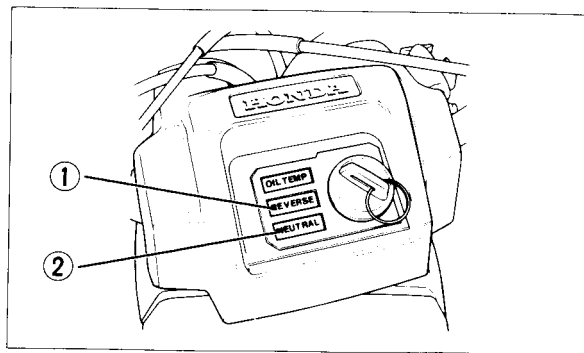

- (1) Reverse indicator lamp
- (2) Neutral indicator lamp