



5. Remove the cross member plate (6).
6. Loosen the band screws (7) and remove the connecting tube (8) by removing the bolt (9).
7. Loosen the band screws (10) and remove the air cleaner case (11) by removing the bolts (12).

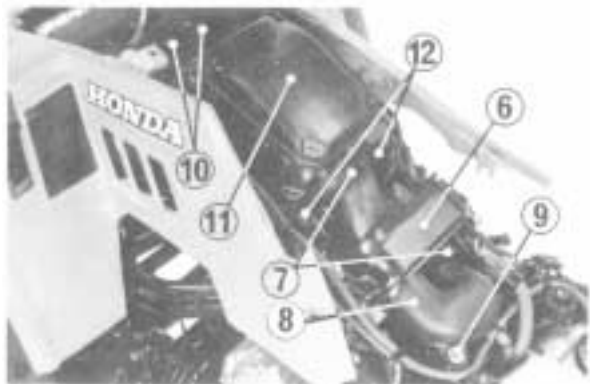

- |                        |                       |
|------------------------|-----------------------|
| (6) Cross member plate | (10) Band screws      |
| (7) Band screws        | (11) Air cleaner case |
| (8) Connecting tube    | (12) Bolts            |
| (9) Bolt               |                       |

8. Remove the three engine mount bolts (13) and mount plates (14).
9. Remove the valve adjusting hole covers (15).

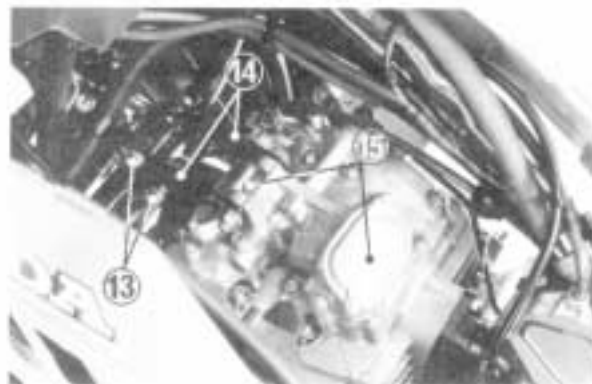

- |                                  |
|----------------------------------|
| (13) Engine mount bolts          |
| (14) Mount plates                |
| (15) Valve adjusting hole covers |