


FINAL DRIVE OIL

Change the final drive and front differential gear oil when specified by the maintenance schedule.

NOTE:

* Change the oil with the final drive and front differential warm, and the TRX on level ground to assure complete and rapid draining.

1. Front differential only: Remove the front guard plate (1) by removing the bolts.
2. To drain the oil, remove the oil filler cap (2) and drain plug (3).
3. After the oil has completely drained, install the

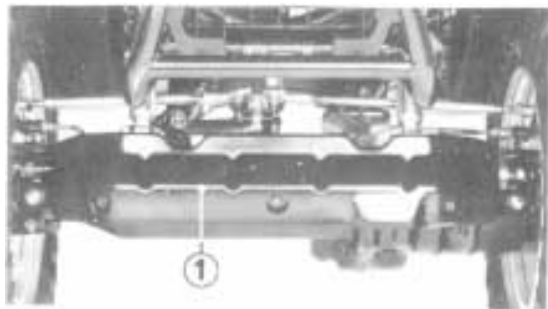

(1) Front guard plate


drain plug.

Drain Plug Torque:

10–14 N·m (1.0–1.4 kg-m, 7–10 ft-lb)

4. Fill the final drive with approximately 100 cc (3.3 US oz) and the front differential with approximately 200 cc (6.6 US oz) of the recommended oil. Make sure the recommended oil is filled up to the lower edge of the inspection hole (4).
5. Install the oil filler cap.
6. Front differential only: Install the front guard plate.

Recommended oil: HYPOID GEAR OIL SAE 80

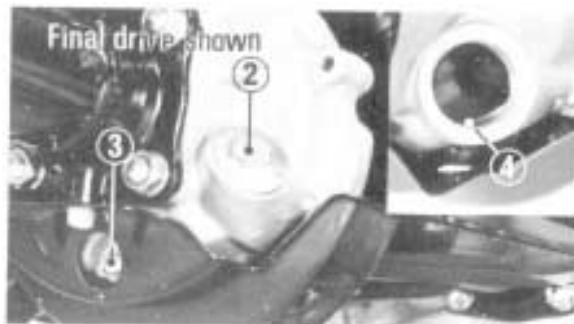

(2) Oil filler cap
(3) Oil drain plug

(4) Inspection hole