

## RIDING IN REVERSE

To shift into reverse, first bring the vehicle to a complete stop and make sure the transmission is in neutral. Then follow these procedures:

1. Be sure there are no obstacles or people in the way.
2. While pushing the reverse selector knob in, squeeze the rear brake lever, then press the downshift switch once to shift into "R" (Reverse) gear.
3. Release the rear brake lever.
4. Open the throttle gradually and ride slowly. Do not open the throttle suddenly or make abrupt turns.
5. To stop, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
6. To shift out of reverse and into neutral, press the upshift switch once to shift into "N" (Neutral) gear.

### NOTE:

The transmission cannot be shifted from neutral back into reverse when the engine speed is above 3,000 rpm or speed of your FOURTRAX is above 2 mph (3 km/h).

While reading this manual, remember:

### **▲WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.