

2. Remove the seat (page 144).
3. Remove the rear fender lid (page 123).
4. Remove the fuse box cover (page 125).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

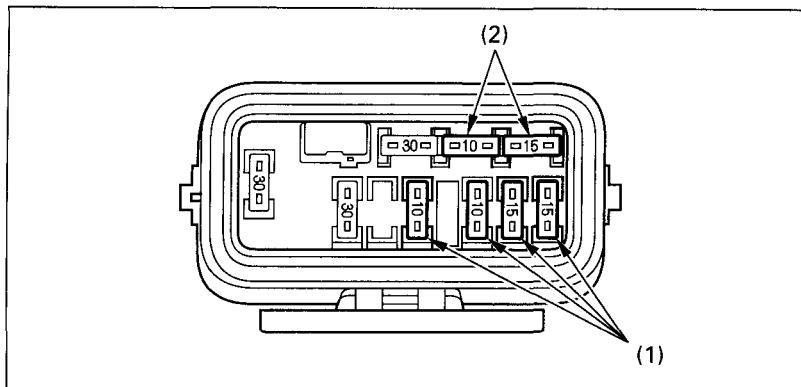


Fig. 4-23 (1) Sub fuses

(2) Spare fuses

⚠ WARNING

POTENTIAL HAZARD

Improperly replacing a fuse.

WHAT CAN HAPPEN

Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.

HOW TO AVOID THE HAZARD

Never use a fuse with a different rating from that specified in this Owner's Manual.

Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.