

Engine Oil & Filter

Checking & Adding Oil


Refer to *Safety Precautions* on page 91 .

Check the engine oil level each day before operating your ATV and add if needed.


1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. Stop the engine and wait 2–3 minutes.
3. Remove the dipstick (1) from the front crankcase cover and wipe it clean.
4. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level. The oil level should be between the upper level mark (2) and the lower level mark (3) on the dipstick.
5. If required, remove the oil filler cap (4) from the left side of the crankcase and add the specified oil into the filler cap hole, up to the upper level mark on the dipstick. Do not overfill.
6. Reinstall the oil filler cap and dipstick.

NOTICE

Running the engine with an improper oil level can cause serious engine damage.

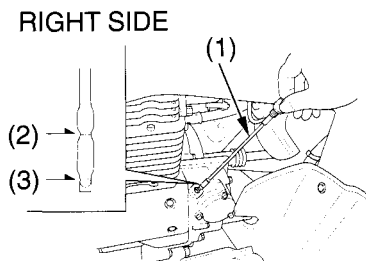

- (1) dipstick
(2) upper level mark

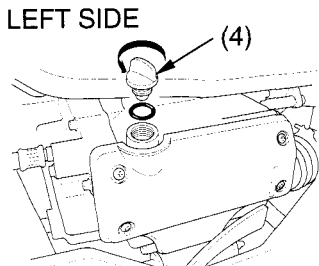

- (3) lower level mark
(4) oil filler cap