

# Quick Reference

|                         |  |
|-------------------------|--|
| Scheduled Maintenance   | Initial: 100 miles (150 km)<br>Regular: every 600 miles (1,000 km)   |
| Pre-ride Inspection     | Check the following items each time before you ride (page 45 ): engine oil, fuel, tires, driveshaft boots (TRX350FE only), nuts & bolts, underbody & exhaust system, air cleaner housing drain tube, leaks, loose parts, cables, lights, throttle, brakes, reverse assist lever, switches, steering. |
| Fuel/Capacity           | unleaded gasoline, pump octane number 86 or higher<br>3.67 US gal (13.9 ℓ)<br>reserve:<br>0.82 US gal (3.1 ℓ)  |
| Engine Oil              | API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-40, JASO T 903 standard MA, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil or equivalent   |
| Maximum Weight Capacity | 463 lbs (210 kg) ...TRX350TE<br>485 lbs (220 kg) ...TRX350FE<br>rider, all cargo and accessories   |