

## Odometer/Tripmeter (Canadian model only)

### Odometer

When selected, the odometer (1) (Fig. 2-16) registers total distance traveled in kilometers while the ignition is ON (1). To change the display (2) from tripmeter to odometer, press and release the Odometer/Tripmeter select button (3).

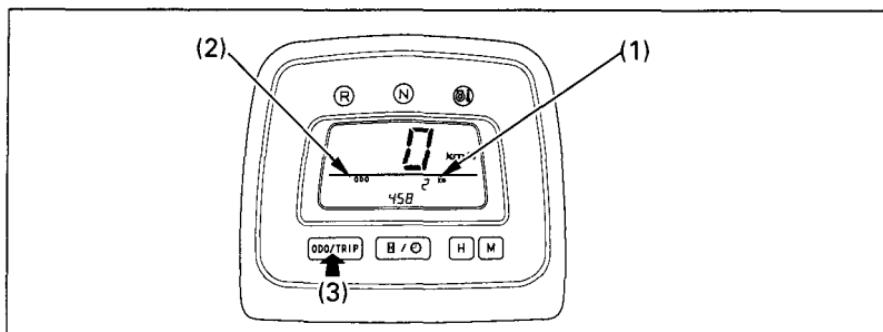


Fig. 2-16 (1) Odometer (3) Odometer/Tripmeter select button  
(2) "ODO" display (3)

### Tripmeter

When selected, the tripmeter (1) (Fig. 2-17) shows mileage per trip while the ignition is ON (1). To change the display (2) from odometer to tripmeter, press and release the Odometer/Tripmeter select button (3). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it in for at least two seconds.

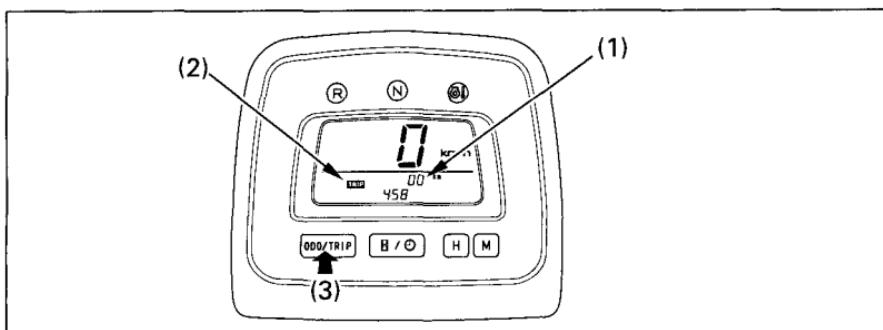


Fig. 2-17 (1) Tripmeter (3) Odometer/Tripmeter select button  
(2) "TRIP" display (3)