

Is Your ATV Ready to Ride?

- Tires* Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 146).
- Driveshaft Boots
(TRX350FM only)* Check for damage (page 152).
- Nuts & Bolts* Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.
- Underbody &
Exhaust System* Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.
- Air Cleaner Housing
Drain Tube* Check for deposits in the drain tube. If necessary, clean the tube (page 118) and check the air cleaner housing.
- Leaks, Loose Parts* Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable.
- Cable* Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed.
- Lights* Make sure the headlight, brakelight and tail light are working properly.
- If you are carrying cargo, also check the following:
- Loading Limits* Make sure you do not exceed the load limits (page 47).