

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600	1200	2000		
			km	150	1000	2000			
			HOURS	20	100	200			
* FUEL LINE						I	—		
* THROTTLE OPERATION						I	119		
* CARBURETOR CHOKE						I	121		
AIR CLEANER		NOTE 1				C	C	114	
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2				I	I	118	
SPARK PLUG						I	I	125	
* VALVE CLEARANCE						I	I	128	
ENGINE OIL						INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		103	
ENGINE OIL FILTER						R	R	R	107
* ENGINE IDLE SPEED						I	I	I	124

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 206).