

# Tires

The recommended “cold” tire pressures are:  
(TRX350TM)

		FRONT	REAR
NO CARGO	RECOMMENDED PRESSURE	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )
	MAXIMUM PRESSURE	3.2 psi (23 kPa , 0.23 kgf/cm <sup>2</sup> )	3.2 psi (23 kPa , 0.23 kgf/cm <sup>2</sup> )
	MINIMUM PRESSURE	2.4 psi (17 kPa , 0.17 kgf/cm <sup>2</sup> )	2.4 psi (17 kPa , 0.17 kgf/cm <sup>2</sup> )
WITH CARGO	RECOMMENDED PRESSURE	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )

(TRX350FM)

		FRONT	REAR
NO CARGO	RECOMMENDED PRESSURE	3.6 psi (25 kPa , 0.25 kgf/cm <sup>2</sup> )	3.6 psi (25 kPa , 0.25 kgf/cm <sup>2</sup> )
	MAXIMUM PRESSURE	4.0 psi (28 kPa , 0.28 kgf/cm <sup>2</sup> )	4.0 psi (28 kPa , 0.28 kgf/cm <sup>2</sup> )
	MINIMUM PRESSURE	3.2 psi (22 kPa , 0.22 kgf/cm <sup>2</sup> )	3.2 psi (22 kPa , 0.22 kgf/cm <sup>2</sup> )
WITH CARGO	RECOMMENDED PRESSURE	3.6 psi (25 kPa , 0.25 kgf/cm <sup>2</sup> )	3.6 psi (25 kPa , 0.25 kgf/cm <sup>2</sup> )