


# If a Fuse Blows

---

## Circuit Fuse Access

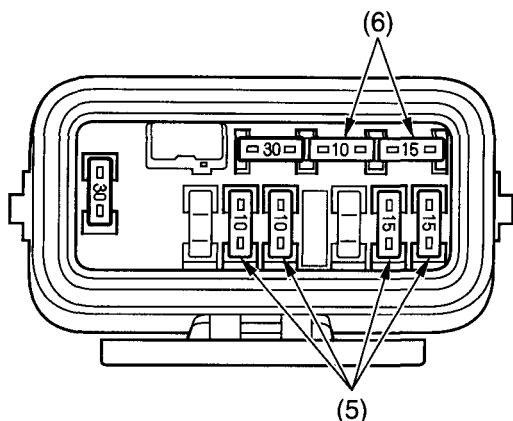

(5) circuit fuses

(6) spare fuses

6. To check or replace a circuit fuse (5), pull the old fuse out of its retaining clips.

If the fuse is blown, replace it with a spare fuse (6) of the same rating or lower.

7. Install the fuse box cover.

8. Install the rear fender lid.

9. Install the seat.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*