

|                            | FREQUENCY<br>ITEMS                | Whichever<br>comes first<br>⇒ | INITIAL     |                      | REGULAR |      | Refer to<br>page |
|----------------------------|-----------------------------------|-------------------------------|-------------|----------------------|---------|------|------------------|
|                            |                                   |                               | MAINTENANCE | MAINTENANCE INTERVAL |         |      |                  |
|                            |                                   |                               | mi          | 100                  | 600     | 1200 |                  |
|                            |                                   |                               | km          | 150                  | 1000    | 2000 |                  |
|                            | NOTE                              | HOURS                         | 20          | 100                  | 200     |      |                  |
|                            | REAR FINAL GEAR CASE OIL          |                               |             | (R: EVERY 2YEARS)    |         |      | 111              |
| NON EMISSION RELATED ITEMS | * BRAKE FLUID                     | (NOTE3)                       |             |                      |         |      | 126              |
|                            | * BRAKE SHOE WEAR                 | (NOTE1)                       |             |                      |         |      | 131              |
|                            | BRAKE SYSTEM                      |                               |             |                      |         |      | 123-132          |
|                            | * REVERSE LOCK SYSTEM             |                               |             |                      |         |      | 115              |
|                            | SKID PLATES, ENGINE GUARD         |                               |             |                      |         |      | 139              |
|                            | * CLUTCH SYSTEM                   |                               |             |                      |         |      | 114              |
|                            | * SUSPENSION                      |                               |             |                      |         |      | -                |
|                            | * SPARK ARRESTER                  |                               |             |                      | C       | C    | 140              |
|                            | * NUTS, BOLTS, FASTENERS          |                               |             |                      |         |      | -                |
|                            | ** WHEELS/TIRES                   |                               |             |                      |         |      | 133-137          |
|                            | ** STEERING SHAFT HOLDER BEARINGS |                               |             |                      |         |      | -                |
|                            | ** STEERING SYSTEM                |                               |             |                      |         |      | -                |

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.