

To replace a fuse:

1. Make sure the ignition switch is OFF (○).

CAUTION:

Turn the ignition switch OFF (○) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.

2. Remove the seat (page 127).
3. Remove the fuse box cover (3) (Fig. 4-23).
4. Pull the old fuse out of the clips.
5. Push a new fuse into the clips and install the fuse box cover.
6. Install the seat.

⚠ WARNING

POTENTIAL HAZARD

Improperly replacing a fuse.

WHAT CAN HAPPEN

Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.

HOW TO AVOID THE HAZARD

Never use a fuse with a different rating from that specified in this Owner's Manual.

Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.