

# Controls & Features

## Front Brake Lever


The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 52.

## Rear Brake Pedal

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 52.

## Parking Brake

### LEFT HANDLEBAR

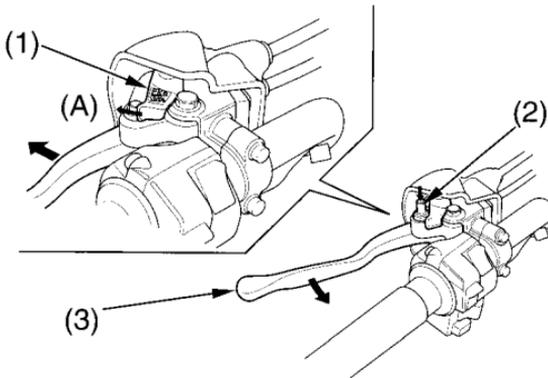

(1) lock lever

(2) parking brake pin

(3) clutch lever/  
parking brake lever

(A) to lock

The lock lever (1) and parking brake pin (2) on the clutch/parking brake lever (3) allows it to be used as a parking brake. To operate, push down the parking brake pin (2), squeeze the clutch lever and then lock it with the lock lever. See *Parking* page 66.