

Engine Oil & Filter

4. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:
7 lbf·ft (10 N·m , 1.0 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 158).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

1. After the oil has drained, make sure the sealing washers on the drain bolts are in good condition.
2. Install the drain bolts and tighten to the specified torque:
Oil tank drain bolt:
14 lbf·ft (20 N·m , 2.0 kgf·m)
Crankcase drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
3. Fill the oil tank with the recommended grade oil approximately:
1.8 US qt (1.7 ℓ)
4. Reinstall the oil filler cap and dipstick.
5. Start the engine and let it idle for 5 minutes.
6. Stop the engine and after a few minutes, remove the oil filler cap and dipstick.
7. Add the recommended oil up to the upper level mark. (Do not overfill.)
8. Reinstall the oil filler cap and dipstick.
9. Check for oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.