

# Storing Your Honda

---

9. Inflate the tires to their recommended pressures (page 127 ).
10. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
11. Place your ATV on blocks to lift both tires off the floor.
12. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

## Removal from Storage

Refer to *Safety Precautions* on page 71 .

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil (page 91 ).
3. If your ATV has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 143) as required. Install the battery.
5. Lubricate the drive chain (page 137).
6. Perform a pre-ride inspection (page 29 ), then test-ride your ATV at low speeds.