

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 188).

For information about carburetor adjustment for riding at high altitude, see page 189 .

Safe Riding Precautions	41
Off-Road Use Only	41
Keep Hands and Feet on Controls.....	42
Control Speed.....	43
Use Care on Unfamiliar or Rough Terrain.....	44
Do Not Perform Stunts.....	45
Starting & Stopping the Engine	46
Preparation	47
Starting Procedure.....	48
Flooded Engine	51
How to Stop the Engine	51
Shifting Gears	52
Riding in Reverse	54

(cont'd)