


# Reverse Lock System


## Reverse Lock System Adjustment

Refer to *Safety Precautions* on page 75 .

RIGHT SIDE

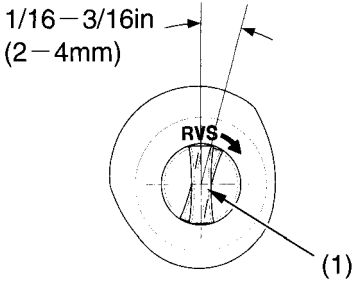

RIGHT SIDE

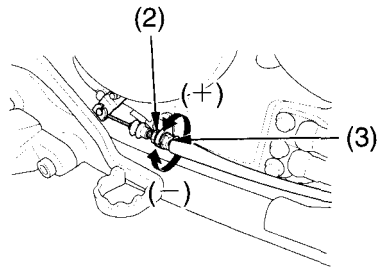

- (1) reverse assist lever
- (2) lock nut
- (3) adjusting nut

- (+) increase freeplay
- (-) decrease freeplay

1. Check the reverse assist lever (1) freeplay.  
1/16 – 3/16 in (2 – 4 mm)
2. To adjust, loosen the lock nut (2) and turn the adjusting nut (3).  
After adjustment, tighten the lock nut securely.

## Other Inspection

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.