

## BRAKE CONTROLS

### Front Brakes

The front brakes are operated by squeezing the front brake lever, near the right handgrip.

### Rear Brake

The rear brake is operated by depressing the brake pedal.

### Parking Brake

The clutch lever also functions as the parking brake lever (Fig. 2-13). To apply the parking brake, push down the parking brake pin ( 3 ), squeeze the clutch lever ( 1 ) and lock it with the lock (A). Always apply the parking brake when parking the FOURTRAX or starting the engine. To release the parking brake, squeeze the clutch lever ( 1 ) so the lock ( 2 ) automatically retracts.

#### NOTE:

Use of the parking brake in freezing weather may cause the rear brake parking linkage to freeze in the locked position.

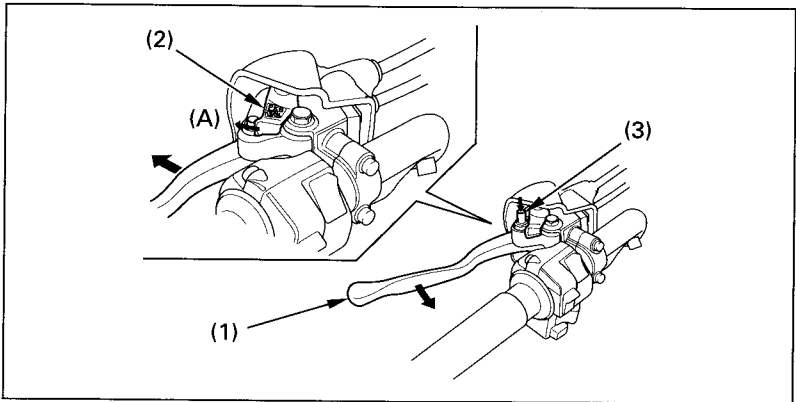


Fig. 2-13 (1) Clutch lever/  
Parking brake lever  
(2) Lock lever

(3) Parking brake pin  
(A) To lock