

## BRAKE CONTROLS

### Front Brakes

The front brakes are operated by squeezing the front brake lever, near the right handgrip.

### Rear Brake

The rear brake is operated by depressing the brake pedal.

### Parking Brake

The clutch lever also functions as the parking brake lever (Fig. 2-13). To apply the parking brake, push down the parking brake pin (3), squeeze the clutch lever (1) and lock it with the lock (A). Always apply the parking brake when parking the FOURTRAX or starting the engine. To release the parking brake, squeeze the clutch lever (1) so the lock (2) automatically retracts.

#### NOTE:

Use of the parking brake in freezing weather may cause the rear brake parking linkage to freeze in the locked position.

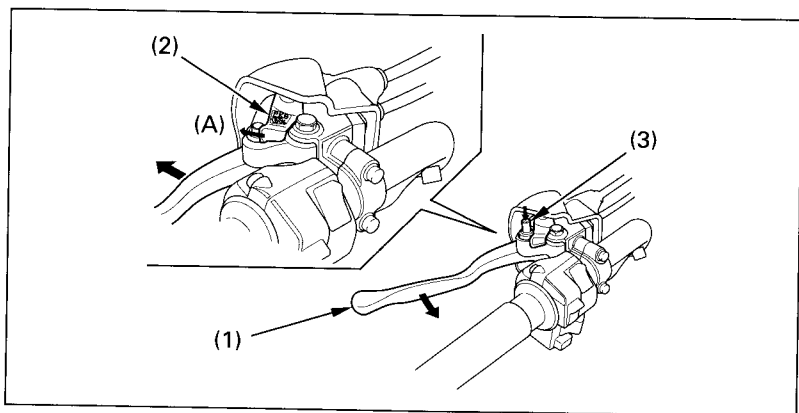


Fig. 2-13

(1) Clutch lever/  
Parking brake lever  
(2) Lock lever

(3) Parking brake pin  
(A) To lock