

## **Battery Removal**

1. Make sure the ignition switch is OFF (  $\circ$  ).
2. Remove the seat (page 127).
3. Remove the battery holder ( 1 ), (Fig. 4-22) by removing the mount bolts ( 2 ).
4. Disconnect the negative (  $-$  ) terminal lead ( 3 ) from the battery ( 4 ) first, then disconnect the positive (  $+$  ) terminal lead ( 5 ).
5. Remove the battery.
  - \* Install in the reverse order of removal.
  - \* Check all bolts and other fasteners are secure.