

If the oil high temperature indicator lamp comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. An electric fan is used to automatically provide sufficient air flow through the oil cooler/before the engine oil temperature becomes too high.

**CAUTION:**

- \* **Failure to stop the engine immediately after the oil high temperature indicator lamp comes on will adversely affect the service life of the engine.**
- \* **Do not carry or store articles on the front bumper. This may restrict air flow through the engine oil cooler, causing it to overheat.**

If the oil high temperature indicator lamp comes on often, have your FOURTRAX inspected by your Honda dealer.

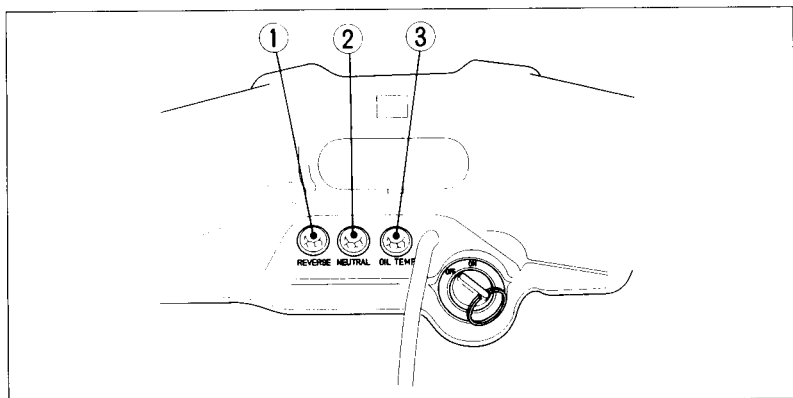


Fig. 2-12

- (1) Reverse indicator lamp
- (2) Neutral indicator lamp
- (3) Oil high temperature indicator lamp