

## REAR FINAL GEAR CASE OIL

Change the oil in the rear final gear case when specified by the Maintenance schedule, change the oil with the final gear case warm, and the FOURTRAX on level ground to assure complete and rapid draining.

To change the rear final gear case oil:

1. Remove the skid plate by removing the bolts (Fig. 4-14).
2. To drain the oil, first place an oil drain pan under the oil drain plug .
3. Remove the oil filler cap (2) and the drain plug (3).
4. After the oil has completely drained, reinstall the drain plug.  
Drain Plug Torque: 9 ft-lb (12 N•m, 1.2 kg-m)
5. Fill the gear case with the recommended oil.

Rear final gear case oil: 3.0 US oz (90 cc)

Recommended oil: Honda shaft drive oil or equivalent HYPOID  
GEAR OIL SAE 80

Remove the oil check bolt (4).

Make sure the oil level reaches the oil level check hole (6).

6. Install the oil filler cap and oil level check bolt.
7. Install the skid plate.

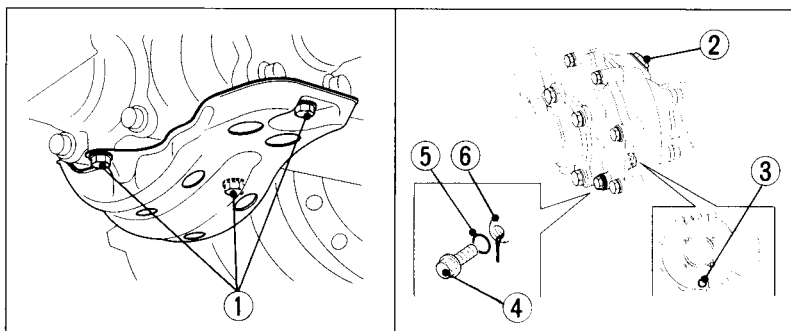


Fig. 4-14

- |                    |                                   |
|--------------------|-----------------------------------|
| (1) Bolts          | (4) Oil check bolt                |
| (2) Oil filler cap | (5) O-ring                        |
| (3) Drain plug     | (6) Lower edge of inspection hole |