



## Indicators & Displays

---

If there is a fuel warning with your ATV, the display will automatically change to the fuel gauge.

If you try to change the display back to ordinary display, it will automatically return to the fuel gauge.

If there is a coolant temperature warning with your ATV, the display will automatically change to the coolant temperature gauge. If you try to change the display back to ordinary display, it will automatically return to the coolant temperature gauge.

