

Safe Riding Precautions

Moving the ATV without Starting the Engine

When you need to move the ATV without starting the engine follow the below steps. (When the ATV has stalled or starts to roll backwards, see page 100)



Be sure your legs are clear of the wheels.

1. After confirming that the engine is off, stand beside the ATV so you can reach the rear brake lever with your left hand.
2. Be sure your legs are clear of the wheels.
3. Check your footing.
4. Slowly and carefully push the ATV, and use the rear brake lever to control speed as necessary.