

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			km	150	1000		2000
			mi	100	600		1200
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS				I	I	189
	FRONT/REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	140,143
*	2WD/4WD SELECT SYSTEM					I	—
*	BRAKE FLUID	NOTE 3			I	I	170
*	BRAKE SHOES WEAR	NOTE 1, 2				I	177
*	BRAKE PADS WEAR	NOTE 1, 2				I	172
*	BRAKE LIGHT SWITCH			I	I	I	178
	BRAKE SYSTEM			I	I	I	169
*	REVERSE LOCK SYSTEM			I	I	I	160
	GUARDS				I	I	187
*	SUSPENSION				I	I	166
*	SPARK ARRESTER				C	C	165
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TYRES			I	I	I	180
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your dealer.