

# Clip Removal

---


## Removal

1. Pull up the centre pin to release the lock.
2. Pull out the clip of the hole.

1.




2.

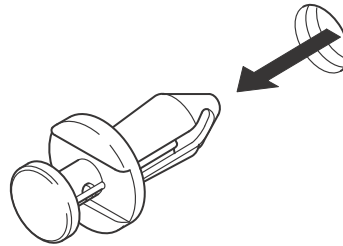

## Installation

1. Insert the clip into the hole.
2. Press down the centre pin securely to lock the clip.

1.

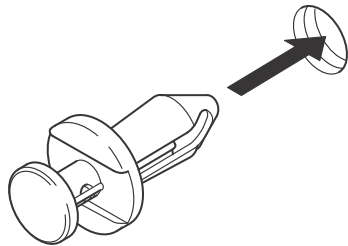

2.

