


Coolant

RIGHT FRONT

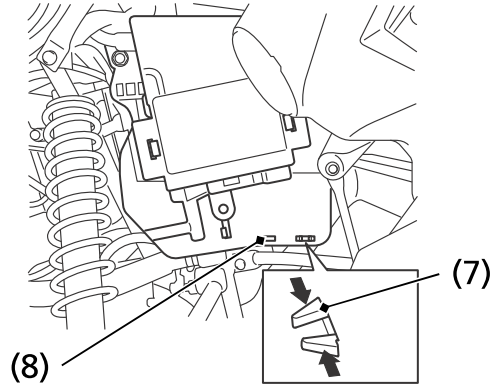


(7) tab A

(8) tab B

7. Remove the centre radiator grill cover (10) by unhooking the right side of the centre radiator grill cover hook (11).
8. Wash the radiator core (12) and centre radiator grill cover.

LEFT FRONT

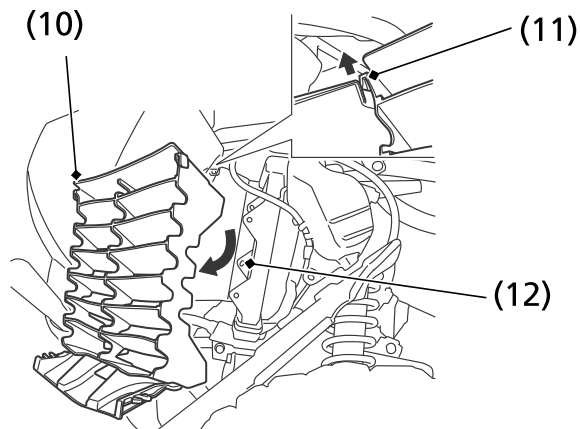

(10) centre radiator grill cover

(11) centre radiator grill cover hook

(12) radiator core

9. Install the removed parts in reverse order of removal.