




## Battery

---

The battery is located in a compartment under the rear fender cover.

### UNDER REAR FENDER COVER

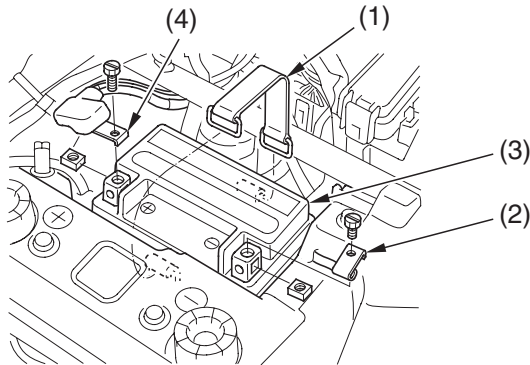

- |                                |                                |
|--------------------------------|--------------------------------|
| (1) rubber band                | (3) battery                    |
| (2) negative (-) terminal lead | (4) positive (+) terminal lead |

### Removal

1. Make sure the ignition switch is OFF (  $\circ$  ).
2. Remove the seat (page 106).
3. Remove the rear fender cover (page 125).
4. Release the rings and remove the rubber band (1).
5. Disconnect the negative (-) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).

