

Instruments & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	19
Indicators & Displays	22
Multi-function Display	28
Speed and Mileage Unit Changing	31
4WD Indicator (Except TRX420TM1)	31
Gear Position Indicator	32
Fuel Gauge	33
Digital Clock	35
Odometer	36
Tripmeter	36
Coolant Temperature Gauge	37
Hourmeter	39
Maintenance Tripmeter & Maintenance Hourmeter	40

(cont'd)