


Indicators & Displays

Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter and maintenance tripmeter show in either "MPH" and "MILE" or "KM/H" and "KM".


To change the speed and mileage unit, press and hold the mode button (1) for more than 5 seconds in odometer (page 36) with the ATV stopped.

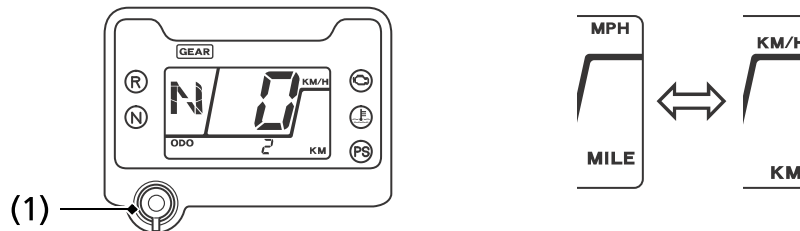

(1) mode button

4WD Indicator (Except TRX420TM1)

The 4WD indicator (1) appears when the 4WD mode engages (page 43).

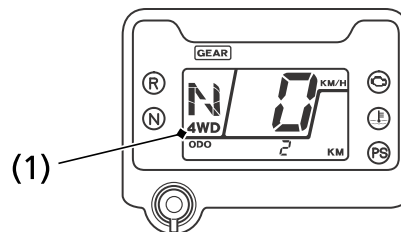

(1) 4WD indicator