







Fuel

Fuel Capacity

Fuel tank capacity, including reserve:

14.7 ℓ (3.88 US gal , 3.23 Imp gal)


Reserve capacity:

4.9 ℓ (1.29 US gal, 1.08 Imp gal)


When there is only one segment left in the fuel gauge (page 33), fuel will be low and you should refuel as soon as possible.

Refueling Procedure

Refer to Safety Precautions on page 113.

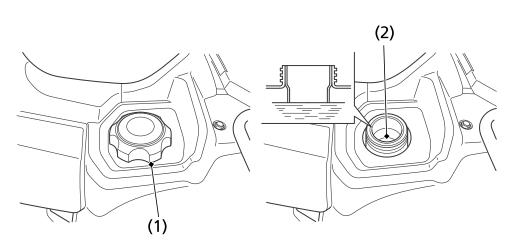

- (1) fuel fill cap
- (2) filler neck

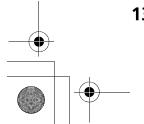

130 Servicing Your Honda



