


## Engine Oil & Filter

---

2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1) and sealing washer (2).

### UNDER ENGINE

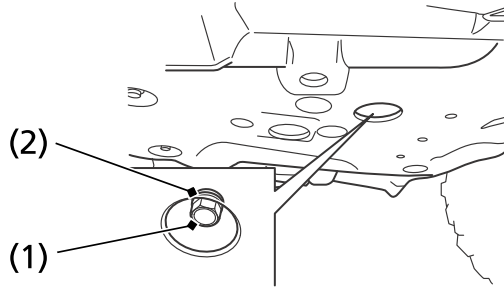

(1) engine oil drain bolt

(2) sealing washer

### *Install a New Engine Oil Filter:*

Place shop towels under the oil filter cover because oil will flow out.

1. Remove the seat (page 124).
2. Remove the tank cover assembly (page 125).