




## If a Fuse Blows

---

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

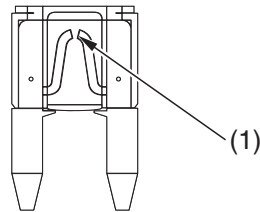

(1) blown fuse

The main fuse and the circuit fuses are located under the rear fender cover.

TRX420FPE only:

The PS (Electric Power Steering) fuse is located under the rear fender cover.

### Recommended Fuses

main fuse	30 A
shift motor fuse	30 A
other fuse	15 A, 10 A × 3
PS (Electric Power Steering) fuse (TRX420FPE only)	40 A

## 198 Taking Care of the Unexpected