



# Index

## I

identification, vehicle..... 208

ignition switch..... 25

indicators,

- gear position indicator..... 17, 18, 19
- high coolant temperature indicator..... 14, 16, 196
- neutral indicator ..... 14, 16
- oil change indicator..... 17, 18, 20
- PGM-FI indicator ..... 14, 16
- PS (Electric Power Steering) indicator (TRX420FPE only) .... 14, 16, 36
- reverse indicator ..... 14, 16
- 4WD indicator (Except TRX420TE) ..... 14, 16, 26

inspection, pre-ride..... 43

