

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 208).

Safe Riding Precautions	55
Off-road Use Only	55
Keep Hands and Feet on Controls	56
Control Speed.....	57
Use Care on Unfamiliar or Rough Terrain.....	58
Do Not Perform Stunts.....	59
Starting & Stopping the Engine	60
Preparation	60
Starting Procedure	61
Flooded Engine	62
Bank Angle Sensor Ignition Cut-off System	62
Stalled Engine	63
How to Stop the Engine	63
Using the Recoil Starter	64
Shifting Gears	65
Riding in Reverse	67

(cont'd)