

2. Remove the seat (page 146).
3. Open the fuse holder cover (1).
4. Replace the old fuse.
5. Reinstall the fuse holder cover.
6. Install the seat.

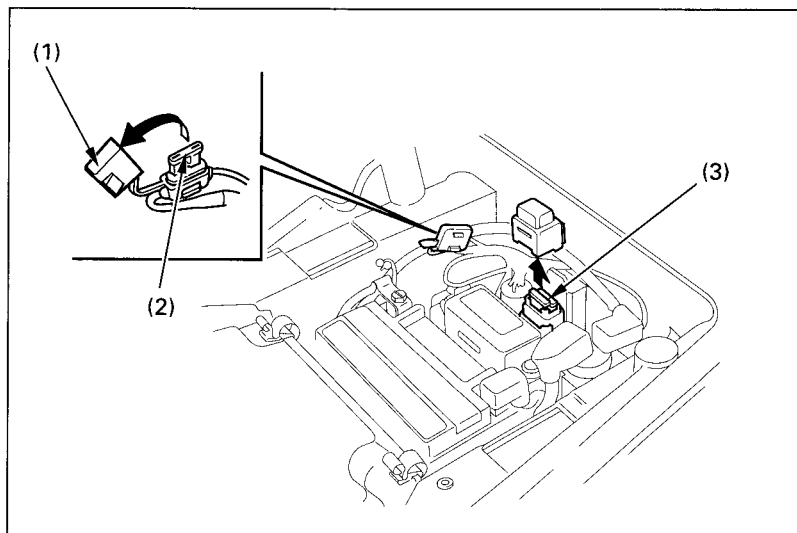


Fig. 4-22 (1) Fuse holder cover (3) Spare fuse
 (2) Main fuse

To replace the sub fuses:

1. Make sure the ignition switch is OFF (\bigcirc).

CAUTION:

Turn the ignition switch OFF (\bigcirc) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.