

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			FIRST ⇒	mi	100	600	1200	
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	*	FUEL LINE				I		—
	*	THROTTLE OPERATION				I		118
	*	CARBURETOR CHOKE				I		120
		AIR CLEANER	NOTE 1			C	C	113
		AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	117
		SPARK PLUG				I	I	124
	*	VALVE CLEARANCE			I	I	I	127
		ENGINE OIL			R	R	R	102
		ENGINE OIL FILTER			R	R	R	106
	*	ENGINE IDLE SPEED			I	I	I	123

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202 ).