


# Air Cleaner

## Cleaning

### UNDER SEAT

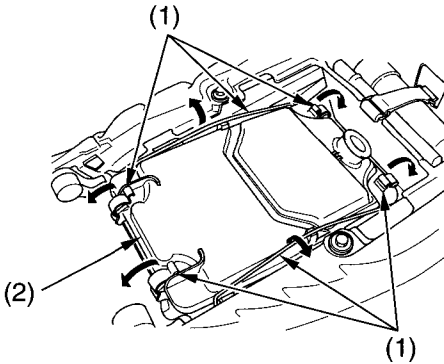

(1) retainer clips

(2) air cleaner housing cover

1. Remove the seat (page 88 ).
2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).

(cont'd)